



# Molten Salt Thorium Reactor Water Monitor

**Real-Time Continuous Water Monitor  
THORIUM, TRITIUM, and OTHER NUCLIDES**

**Model – MSTR-H20**

Most nuclear power stations have high range water monitors for monitoring coolant leaks, but low range water monitors for real-time, on-line use have not been available until now.

So, as yet very few power plants have real-time radiation monitors in place to **protect the water and the public, to spot problems early and to ensure compliance with current regulations.**

## Features

- Real Time, In-Line, Continuous
- Detects:
  - Alphas (Including Thorium 232 and Uranium 238)
  - Betas
  - Gammas
  - Tritium
- No Reagent Tanks to Fill
- No Waste Stream
- Easy Calibration
- Prevent Acute Health Effects
- Reduce Risk of Chronic Exposure
- Full SCADA compatibility

## Problem

**Molten Salt Thorium Reactors are now under development in the U.S., China, India, and Japan. They have a unique architecture and require unique radiation monitoring instrumentation.**

## Solution

For the first time in a **Continuous Real Time** water monitor the Model **MSTR-H20** solves this problem by continuously monitoring water measuring Thorium 232, its decay products, fission products, and its activation products including Tritium.

**Using Alpha, Beta and Gamma, and Tritium detectors and Gamma-MCA isotope identifier (multi-channel analyzer)** the information from these detectors is analyzed and displayed in units of picoCuries per liter. The calculations are updated every 2 minutes, every hour and every day. The longer update times correspond with greater precision and increased sensitivity. Using TA Tried and True sample collection and measurement technology these detectors measure Alpha, Beta and Gamma from any radioactive liquids. Measurements of radiation discharge concentration are logged 24 hr/day, 7 days a week.



**TECHNICAL ASSOCIATES  
OVERHOFF TECHNOLOGY**

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303

PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@USNUCLEARCORP.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISIONS OF



USNUCLEARCORP

OTCQB-UCLE

# Molten Salt Thorium Reactor Water Monitor

Real-Time Continuous Water Monitor  
THORIUM, TRITIUM, & OTHER NUCLIDES  
Model – MSTR-H20



## Sources of Water Borne Radioactive Material

- Coolant leaks into pipes or
- Drains
- Deposition of air borne materials
- Make-up water

## Location of Contaminated Water

### Onsite "Inventory"

- Pipes, drains, pools, surface water

### Underground

- Drainage pipe
- Vado –zone/soil air

### In the Aquifer

#### *Crossing site boundaries*

- Liquid waste stream
- Storm drains

#### *Off-site/environmental*

- Surface Water
- Rivers
- Local drinking water



## TECHNICAL ASSOCIATES OVERHOFF TECHNOLOGY

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303

PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@USNUCLEARCORP.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISIONS OF



USNUCLEARCORP

OTCQB-UCLC

# Molten Salt Thorium Reactor Water Monitor

## Real-Time Continuous Water Monitor THORIUM, TRITIUM, & OTHER NUCLIDES

### Model – MSTR-H2O

## Description

**MSTR-H2O** Model is a multi-detector water monitor /controller for simultaneous measuring of alpha, beta and gamma-emitting radio nuclides. The electronics are microprocessor with color LCD display. The pre-amps are plug in modules allowing change or addition of functions at a later date, and allow rapid repair by module replacement in the field.

Gamma Spec shield can be opened for cleaning with minimum effort. All connections are sealed against leaks. The standard water moving later date, and allow rapid repair by module replacement in the field.

A wide range of pump capacities are available to meet users specific needs. The entire system is mounted in a wheeled, self-contained rugged cabinet. The MSTR-H2O comes complete with all cabling tubing and connectors in place and is ready to operate. 115 Volt 60Hz is standard; 220 Volt 50/60 Hz is optional.

The modular system is covered by TA's unique exchange warranty system in addition to the full one year warranty.

On-site warrantees are available in many areas. Detector shields are made of lead encased in welded housing for long useful life and easy decontamination. The Alpha and Beta flow cells are easily changed via disconnect fittings.


## Four Principal Detectors

1. Alpha Detector includes Thorium 232 and Uranium 238 features:  
Alpha scintillation sheets that consist of a light-tight detector assembly which interfaces with the sample via quick disconnect coax cables and medical grade hoses. The sample is viewed by a matched pair of 5" diameter photo-multiplier tubes.
2. Beta Scintillation detector: With a 1,100cm<sup>2</sup> sensitive area.

## The Alpha, Beta Pulse Analysis

Conditions and analyzes the output from the photo-multiplier tubes by pulse height, duration and coincidence. This permits the system to eliminate counting most background and noise counts. Sensitivity is enhanced by the use of stochastic resonance plus high gain, low noise PM tubes and pre-amps.

3. **Gamma-MCA analyzer:** The water is measured for Gamma-emitter content with greater than 1,000 channels. The energy range is user settable. For example the MCA can be set for Gamma energy of 10 KeV to 3 MeV, (or 10 MeV).
4. **Tritium Detector:** Scintillation sheets that consist of a light-tight detector assembly which interfaces with the sample via quick disconnect coax cables and medical grade hoses. The sample is viewed by a matched pair of 5" diameter photo-multiplier tubes.

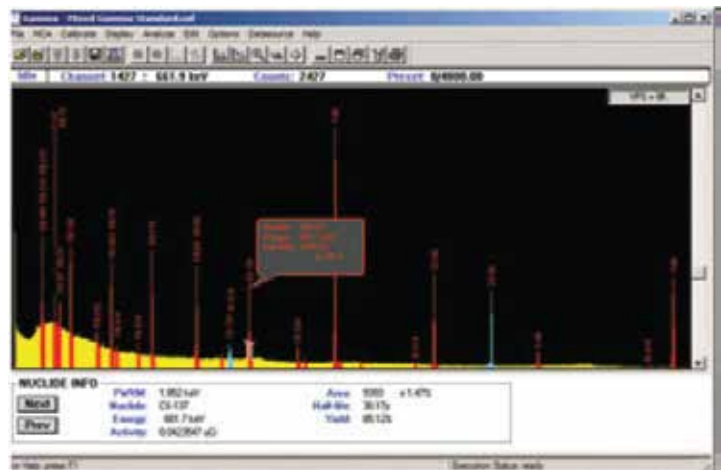

## TECHNICAL ASSOCIATES OVERHOFF TECHNOLOGY

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303  
PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@USNUCLEARCORP.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISIONS OF  
 USNUCLEARCORP  
OTCQB-UCLC

# Molten Salt Thorium Reactor Water Monitor

## Real-Time Continuous Water Monitor THORIUM, TRITIUM, & OTHER NUCLIDES Model – MSTR-H20

### Isotope Identification System

Peak Detection and Isotope Identification **TA SMART-PEAK™** Software detects radiation peaks even at very low gamma concentration. In the event of high activity and during system calibration, the isotope identifier function takes over and displays the exact radioactive nuclides in the water.

### Data: Analysis – Display – Hard Copy Archive

- In each peak or area of interest, the net counts are automatically converted to user settable units, of picoCuries/liter or KBq/m<sup>3</sup> (using the detector efficiencies automatically measured and stored previously by **MSTR-H20** semi-automatic self-calibration procedure).
- The concentration and total activity released and MDA levels are continuously calculated and recorded. This real time information will alert the notification system. Also, all data is saved to the hard drive in spreadsheet format.
- Historical data is easily displayed on-screen may be printed out with optional graphics printer in tabular or graphical format, showing quantitative information as well as trends. Data is recorded frequently so time-resolution is excellent.
- Ethernet and USB ports (with security) make it easy to archive and further analyze data.
- **Continuous, Reliable Data – YES, False Alarms – NO**
- Our systems have multiple layers of protections and redundancy in both the software and the physical act of reporting an alarm preventing false alarms. This includes an alarm voting system so that alarms will come on only if all the data is consistent and conclusive Data is continuously recorded to allow human interpretation.
- Each alarm activates fail-safe relays. Relay contacts are available to user.

### System Includes

<b>UV Lamp:</b>	Used on inlet as algae-cide.
<b>Flat Screen Monitor:</b>	LCD High Color Graphics
<b>Hard Drive:</b>	1 Terabyte
<b>DATA Acquisition:</b>	Board and All Cables
<b>High Speed Ethernet access:</b>	LAN or SCADA hookup.
<b>Specialized software:</b>	Designed for Gamma Spectrum Detection; user friendly adaptability for your needs.

<b>Optional</b>	MODBUS or other protocols Printer
-----------------	--------------------------------------

<b>Triggered Aliquot</b>	This feature automatically collects and stores a small water sample for independent analysis whenever an alarm or event of interest occurs.
--------------------------	---



## TECHNICAL ASSOCIATES OVERHOFF TECHNOLOGY

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303  
PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@USNUCLEARCORP.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISIONS OF  
 USNUCLEARCORP  
OTCQB-UCLF

# Molten Salt Thorium Reactor Water Monitor

## Real-Time Continuous Water Monitor THORIUM, TRITIUM, & OTHER NUCLIDES

### Model – MSTR-H20

## System Flow Rate

<b>Optional:</b>	Per Customer Requirement: Very wide range of flow rates is available
<b>Sample temperature standard:</b>	Up to 80° F liquid. (optional to higher temperatures)
<b>Ambient temperature:</b>	65° F - 100° F (wider temperatures ranges optional)
<b>Optional:</b>	Cooler model Cool-33 for detector and sample is used in case of higher sample or ambient temperatures AND/OR for increased precision measurements.

## Size and Weight

<b>Dimensions:</b>	One cabinet: 23" wide x 31" deep x 36" high including wheels
<b>Wheels:</b>	5" dia, high capacity, rugged wheels with lock and rubber tires.
<b>Shipping Weight:</b>	Standard unit: 380kg / 837 lbs - excluding shielding
<b>Note:</b>	Lead Shot for shielding can be shipped with instrument or shipped separately. Overseas customers may wish to buy locally.

SPECIFICATIONS	PARTICULATE DETECTOR	PRINCIPAL DETECTOR
<b>Monitoring</b>	Pre-Filter	Sample Flow
<b>Radiation Detected</b>	GAMMA	GAMMA
<b>Materials Monitored</b>	Particulates	Water Borne Radioactivity
<b>Scintillator Shape</b>	2" x 2"	3" x 3"
<b>Scintillating Crystal</b>	Nal (TI) Spectroscopic Grade	Nal (TI) Spectroscopic Grade
<b>Shielding</b>	None – Standard ½" Recommended	2" Standard



## TECHNICAL ASSOCIATES OVERHOFF TECHNOLOGY

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303

PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@USNUCLEARCORP.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISIONS OF



USNUCLEARCORP

OTCQB-UCLF




# Molten Salt Thorium Reactor Water Monitor

Real-Time Continuous Water Monitor  
 THORIUM, TRITIUM, & OTHER NUCLIDES

Model – MSTR-H2O

## FLOW CHART

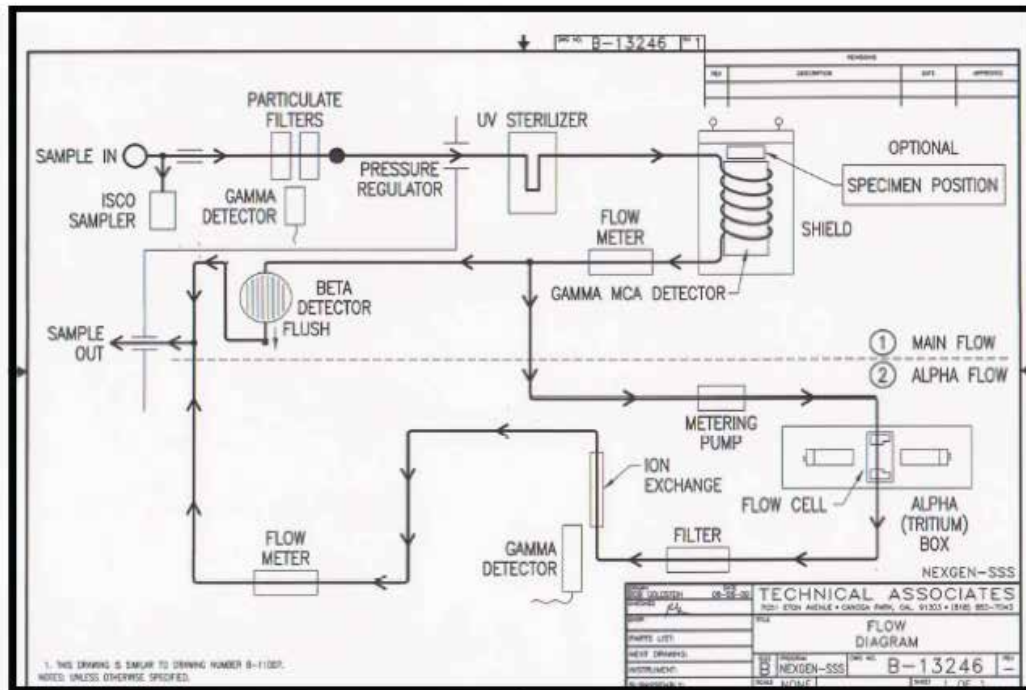

FLOW PATH			
1	Water Inlet port	11	Alpha Loop flow meter
2	Pressure relief valve	12	Ion Exchange with gamma detector
3	ISCO Sampler	13	Discharge water is clean and can go back into drinking water line.
4	Particulate Filter (with Gamma Detector)	14	No liquid scintillate or reagents are added
5	Ultra Violet Sterilizer	15	No toxic or radioactive waste of any kind.
6	Gamma spec shield		
7	Main Gamma Detector with MCA		
8	Mass Flow Meter		
9	Metering pump for Alpha detector loop.		
10	Alpha Detector flow cell (with Anthracene crystals)		



## TECHNICAL ASSOCIATES OVERHOFF TECHNOLOGY

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303  
 PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@USNUCLEARCORP.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISIONS OF



USNUCLEARCORP

OTCQB-UCLE

# Molten Salt Thorium Reactor Water Monitor

Real-Time Continuous Water Monitor  
 THORIUM, TRITIUM, & OTHER NUCLIDES

Model – MSTR-H20

DETECT	PAG LEVEL	LOWER LIMIT OF SENSITIVITY	TOP OF RANGE	SENSOR/METHOD USED	TIME	MAINTENANCE ACTION FOR FINISHED WATER
<b>NPP-Alpha</b>	<b>Thorium-232</b> <b>U-238</b> 3,000 pCi/l			5" dia. Dual PM Tube, crushed scintillation bed of crystals	3 mos	Replace particulate filter cartridge
30 min 24 hr		25,000 pCi/l 3,000 pci/l	$2 \times 10^7$ pCi/l			
<b>NPP-Beta</b>	<b>K-40</b> 30,000 pci/l			5" dia. Dual PM Tube, 1,000 mi chamber	3-6 mos	Replace particulate filter cartridge
30 min 24 hr		30,000 pCi/l 3,000 pci/l	$2 \times 10^7$ pCi/l	1100 cm <sup>2</sup> Beta Scintillator		
<b>NPP-Gamma</b>	<b>Co-58</b> 30,000 pci/l			Multi-Channel Analyzer, Smart Peak Detection Software	3-6 mos	Simple MCA check
30 min 24 hr		20,000 pCi/l 5,000 pci/l	$2 \times 10^7$ pCi/l	75 x 75 mm NaI (TL) Crystal		
<b>OPTIONS</b>						
<b>NPP-Tritium &amp; C-14</b>		20,000 pci/l	$1 \times 10^6$ pCi/l	Crushed scintillation bed of crystals		Replace ion exchange cartridge
<b>NPP-Radon</b>		100 pCi/l	2,000 pci/l		1-3 mos	Clean or replace vapor trap
<b>PRE-CONDITION</b>						
<b>Expel Radon</b>						Clean or replace vapor trap



## TECHNICAL ASSOCIATES OVERHOFF TECHNOLOGY

7051 ETON AVENUE, CANOGA PARK, CALIFORNIA 91303

PHONE: 818-883-7043 | FAX: 818-883-6103

SALES@USNUCLEARCORP.COM | TECH-ASSOCIATES.COM | USNUCLEARCORP.COM

DIVISIONS OF



USNUCLEARCORP

OTCQB-UCLF